 


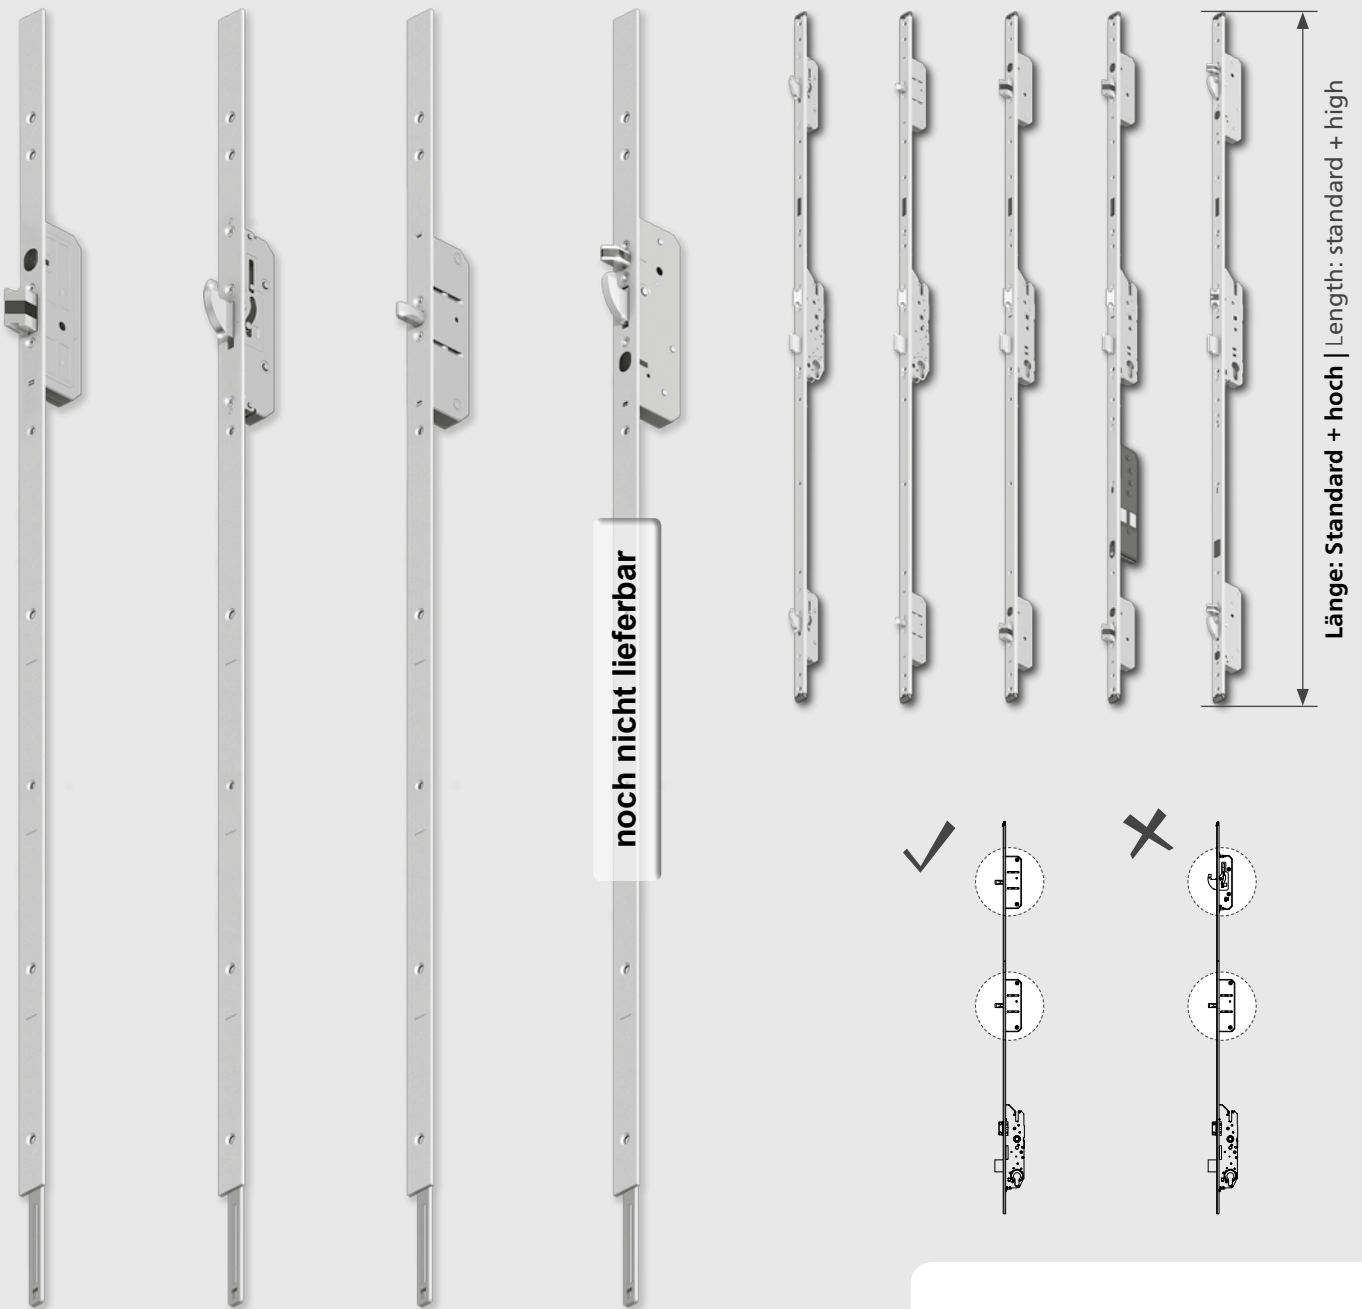

systemeQ-M-H systemeQ-M-SL systemeQ-M-SL-ESC
systemeQ-M-B systemeQ-M-SLM systemeQ-M-SLM-ESC

Verlängerung – Montageanleitung

 
Extension – Installation instructions




esco-M6.3-DE-GB/02.19-0 03/2019



Verlängerungstypen
Extension types



systemQ-M-H




 







systemQ-M-SL-ESC
systemQ-M-SLM-ESC



systemQ-M-H

         Montagebeispiel
Installation example

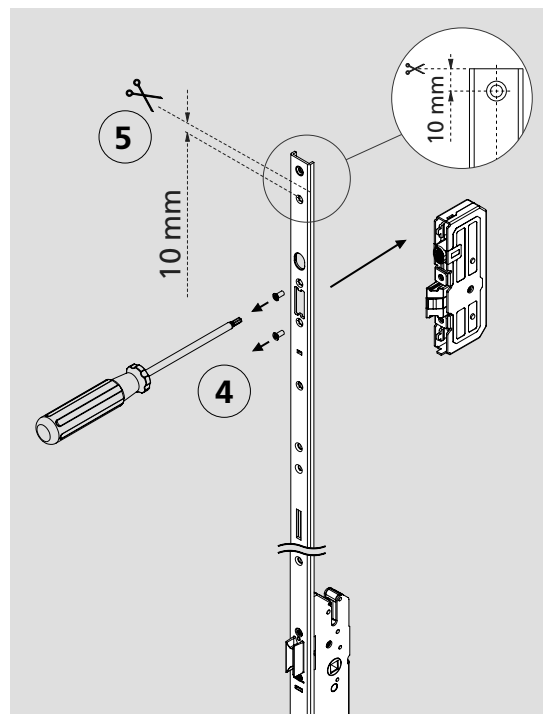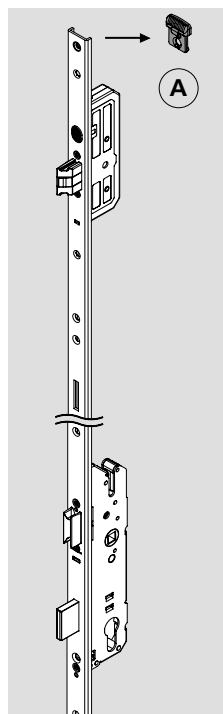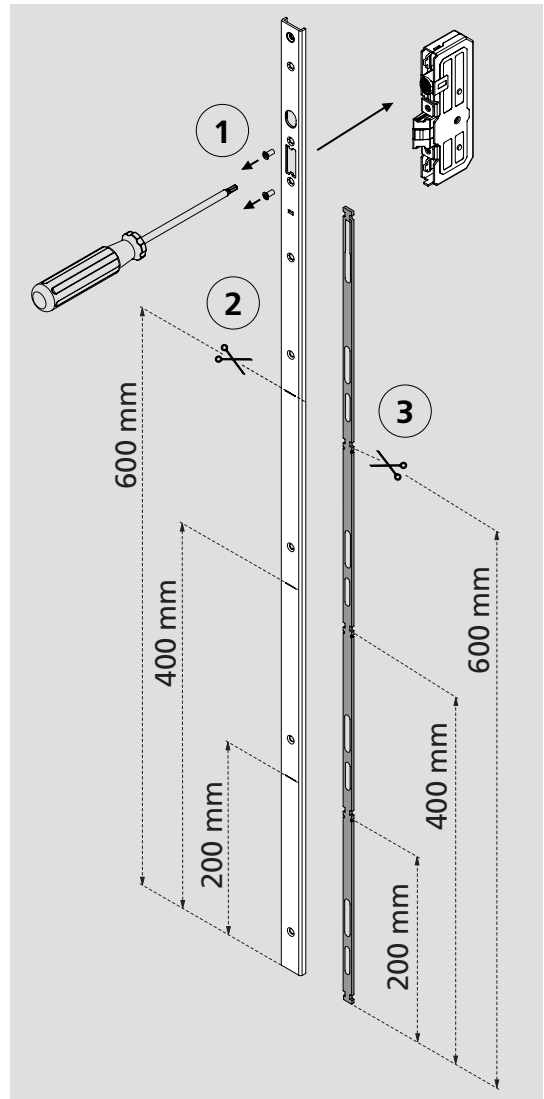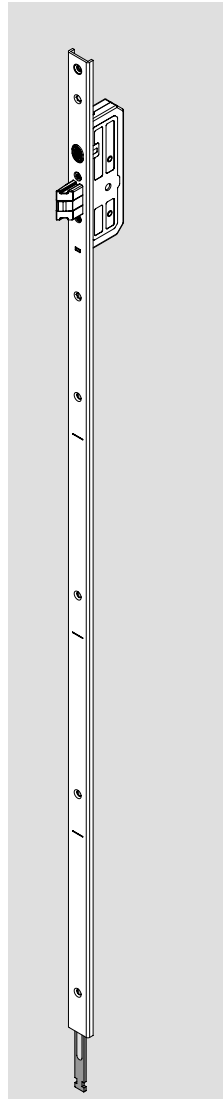

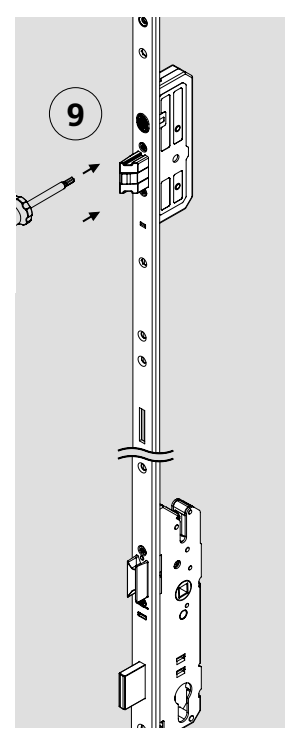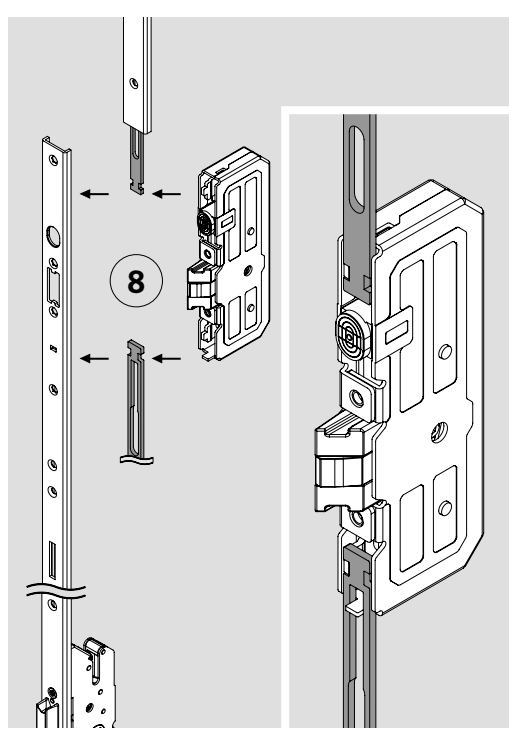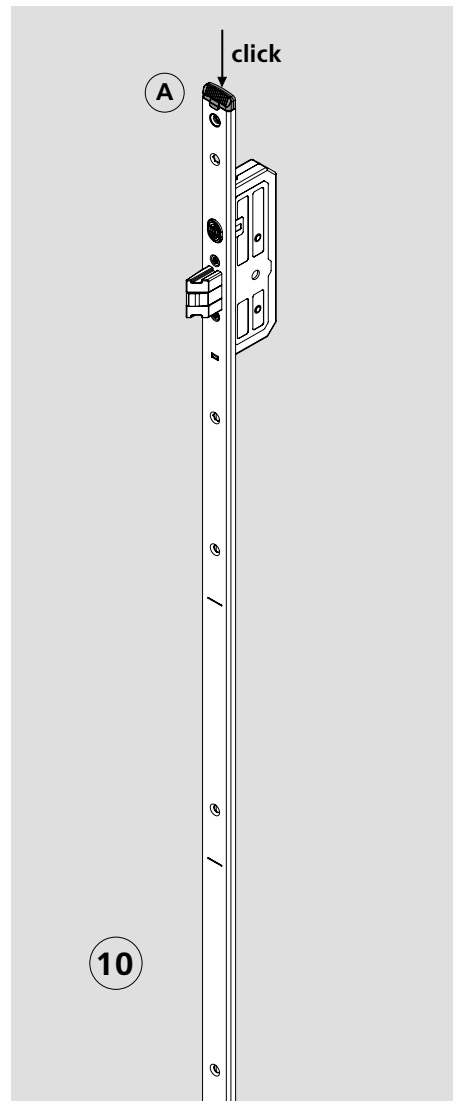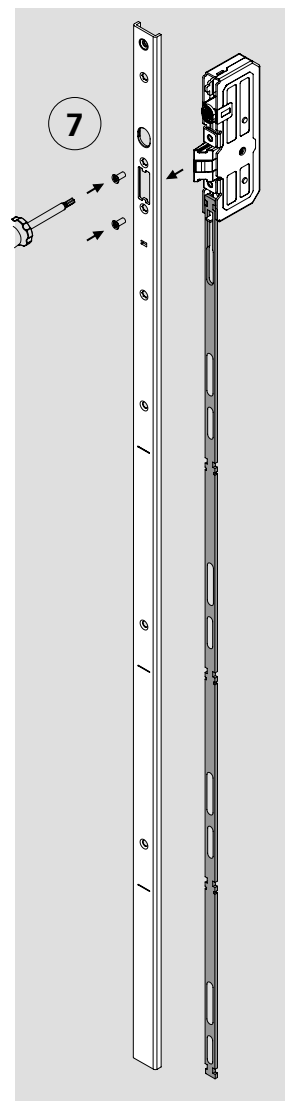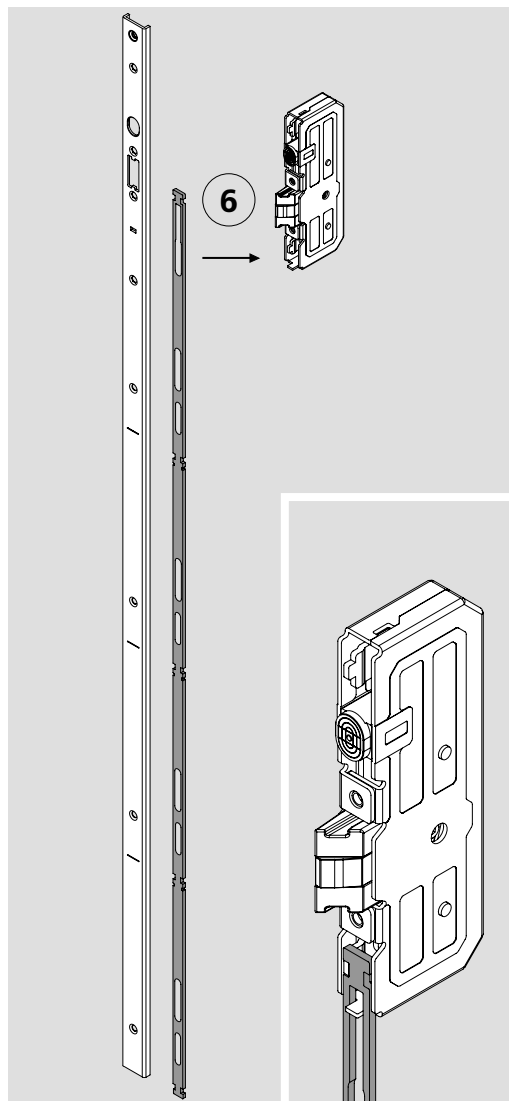

systemQ-M-H | systemQ-M-B
systemQ-M-SL | systemQ-M-SLM
systemQ-M-SL-ESC | systemQ-M-SLM-ESC

systemQ